

Cabin Air Filter Installation Guide

- Lincoln Continental (1995 - 97)

FILTER PLACEMENT: **Base of Windshield**
QTY: **1**

Installation: (5 ~ 10 min.)



Easy




Moderate



Difficult



Professional

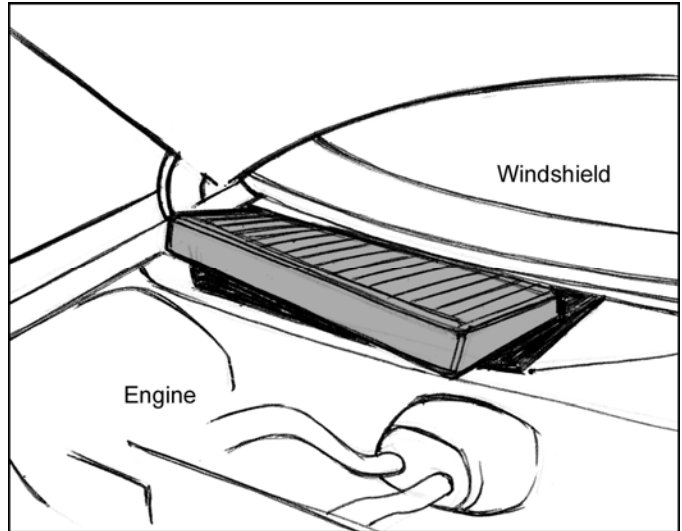

CAUTION

Ensure ignition switch is OFF before attempting to change the Cabin Air Filter!

INSTRUCTIONS:*

1. Turn the Ignition switch to the 'on' position.
2. Turn the windshield wipers 'on'.
3. Turn ignition switch OFF when wipers are straight up on the windshield.
4. Open the hood.
5. Pull back the weather-strip from the cowl vent screen (pass side)
6. Remove the screws holding the passenger side fresh air intake grille.
7. Remove the passenger side fresh air intake grille.
8. Remove and replace the used cabin air filter with a new Pentius Cabin Air Filter.
9. Verify that the air flow arrows are in the correct direction if noted on filter.
10. Replace all components in the reverse order of removal.

* Note that Cabin Air filter replacement instructions may be representative for certain vehicles.