

Part No. **PHB5390**





Cabin Air Filter Installation Guide

- Acura 3.2 CL (2001 - 03)
TL (1999 – 2003)
- Honda Accord (1998 – 2002)

FILTER PLACEMENT: **Under Dash**
QTY : **2**

Installation: (30 ~ 45 min.)

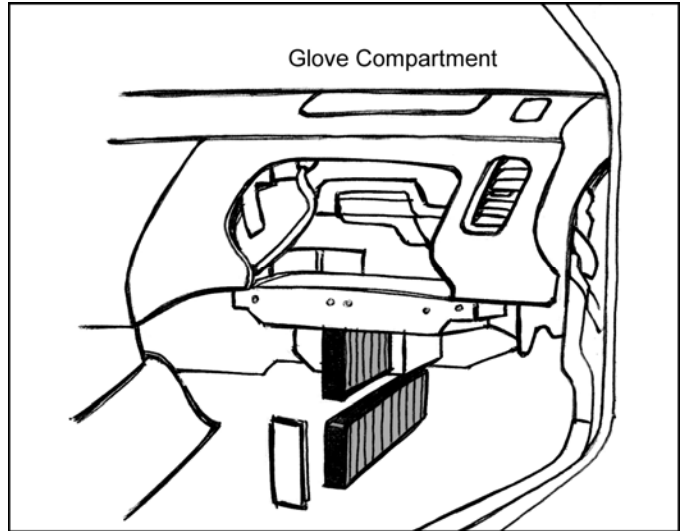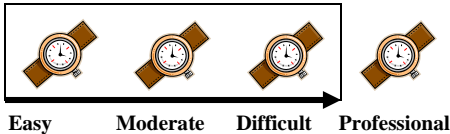

CAUTION

Ensure ignition switch is OFF before attempting to change the Cabin Air Filter!

INSTRUCTIONS:*

1. Open Glove Compartment.
2. Remove square locking tabs.
3. Remove the screws from the glove box compartment.
4. Close Glove Box.
5. There are two access panels. One beneath the radio panel and one to the right side.
6. Remove both panels to access the middle access panel cover screws. Remove and set the panel aside.
7. Remove the screws securing the glove compartment and disconnect the glove box light.
8. Remove the cabin air filter access panel.
9. Remove the first filter, the second is directly behind the first and can be removed by sliding it towards you.
10. Remove and replace the used cabin air filters with new Pentius Cabin Air Filters.
11. Verify that the air flow arrows are in the correct direction if noted on filter.
12. Replace all components in the reverse order of removal.

* Note that Cabin Air filter replacement instructions may be representative for certain vehicles.