
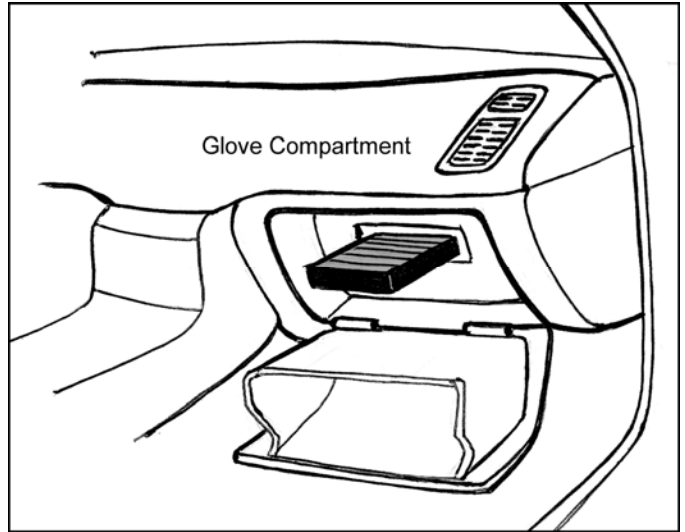


## Cabin Air Filter Installation Guide

- Honda CRV (1997 - 2001)  
Insight (2000 - 2005)

FILTER PLACEMENT: **In Glove Box**  
QTY: **1**

**Installation: (15 ~ 20 min.)**

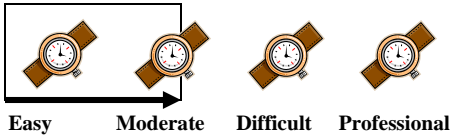

### CAUTION

Ensure ignition switch is OFF before attempting to change the Cabin Air Filter!

### INSTRUCTIONS:\*

1. Open Glove Compartment.
2. Remove the screws from the glove box compartment.
3. Release the glove box hooks.
4. Remove the Glove Box.
5. Remove the cabin air filter access panel housing.
6. Remove and replace the used cabin air filter with a new Pentius Cabin Air Filter.
7. Verify that the air flow arrows are in the correct direction if noted on filter.
8. Replace all components in the reverse order of removal.

\* Note that Cabin Air filter replacement instructions may be representative for certain vehicles.