

Part No. **PHB5425**



## Cabin Air Filter Installation Guide



- Acura 3.5 RL (1996 - 2004)

FILTER PLACEMENT: **In Glove Box**  
QTY : 2

**Installation: (35 ~ 45 min.)**

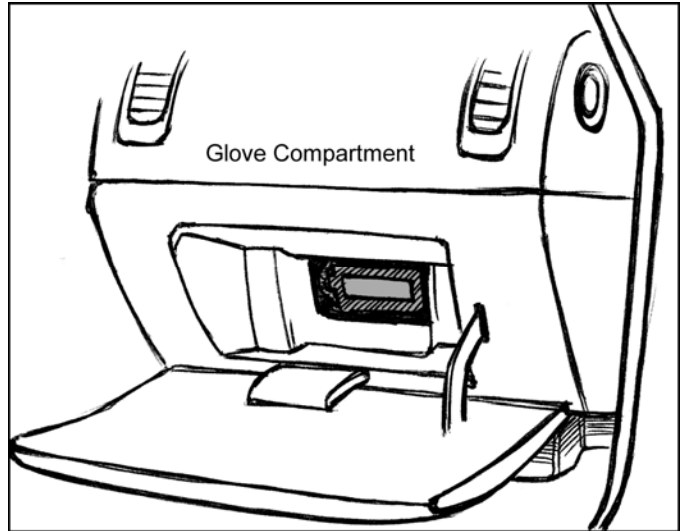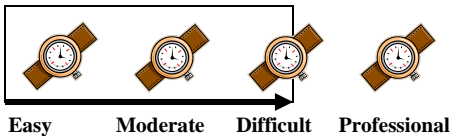

### CAUTION

Ensure ignition switch is OFF before attempting to change the Cabin Air Filter!

### INSTRUCTIONS:\*

1. Open Glove Compartment.
2. Remove the glove box compartment lower access panel.
3. Open the Glove Box.
4. Remove the tabs so that the glove box will fall forward.
5. Remove the screws and clip from the glove box and remove box.
6. Disconnect harness for trunk opener
7. Remove the screws from cabin air filter access panel housing.
8. Remove and replace the used cabin air filter with a new Pentius Cabin Air Filter.
9. Verify that the air flow arrows are in the correct direction if noted on filter.
10. Replace all components in the reverse order of removal.

\* Note that Cabin Air filter replacement instructions may be representative for certain vehicles.