

Cabin Air Filter Installation Guide

- Lincoln LS (2000 - 2002)

FILTER PLACEMENT: **Base of Windshield**
QTY: **1**

Installation: (5 ~ 10 min.)



Easy




Moderate



Difficult



Professional

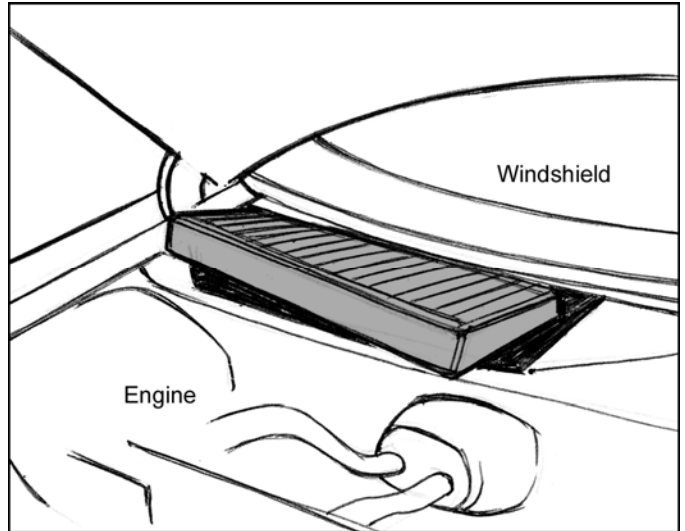

CAUTION

Ensure ignition switch is OFF before attempting to change the Cabin Air Filter!

INSTRUCTIONS:*

1. Turn the Ignition switch to the 'on' position.
2. Turn the windshield wipers 'on'.
3. Turn ignition switch OFF when wipers are straight up on the windshield.
4. Open the hood and secure it in the raised position.
5. Pull back the weather-strip from the cowl vent screen
6. Release the retaining clips and lift the entire cowling upward and remove.
7. Remove the shield to access the cabin air filter.
8. Remove and replace the used cabin air filter with a new Pentius Cabin Air Filter.
9. Verify that the air flow arrows are in the correct direction if noted on filter.
10. Replace all components in the reverse order of removal.

* Note that Cabin Air filter replacement instructions may be representative for certain vehicles.