

Part No. **PHB5526**



Cabin Air Filter Installation Guide

- Lincoln 3.0L (2003 - 2006)

FILTER PLACEMENT: **Base of Windshield**
QTY: **1**

Installation: (5 ~ 10 min.)



Easy




Moderate



Difficult



Professional

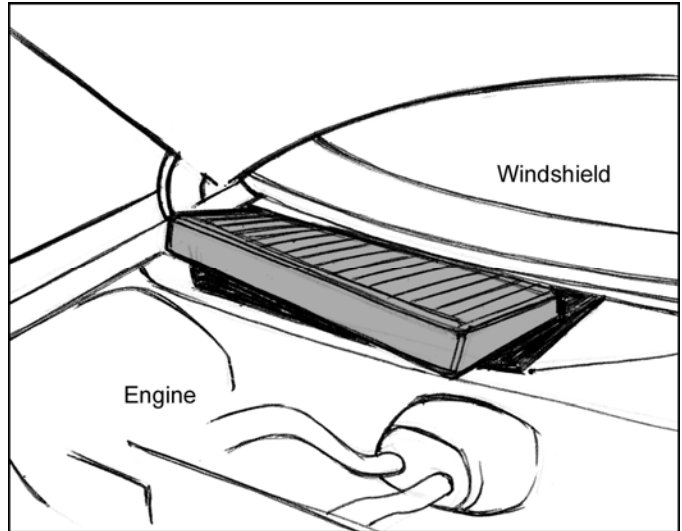

CAUTION

Ensure ignition switch is OFF before attempting to change the Cabin Air Filter!

INSTRUCTIONS:*

1. Turn the Ignition switch to the 'on' position.
2. Turn the windshield wipers 'on'.
3. Turn ignition switch OFF when wipers are straight up on the windshield.
4. Open the hood and secure it in the raised position.
5. Release the retaining clips and remove the shield to access the cabin air filter.
6. Push back on the slide on the left to access Cabin Air Filter.
7. Remove and replace the used cabin air filter with a new Pentius Cabin Air Filter.
8. Verify that the air flow arrows are in the correct direction if noted on filter.
9. Replace all components in the reverse order of removal.

* Note that Cabin Air filter replacement instructions may be representative for certain vehicles.