



Cabin Air Filter Installation Guide

- Mazda 6 (2003 – 2006)

FILTER PLACEMENT: **Behind Glove Box
Compartment**

QTY: 1

Installation: (10 ~ 20 min.)

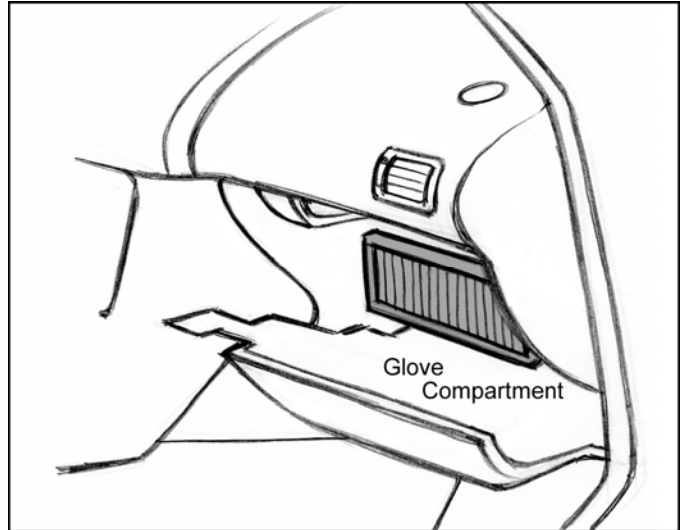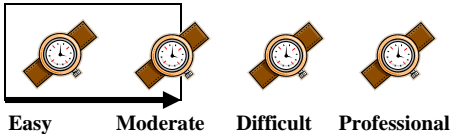

CAUTION

Ensure ignition switch is OFF before attempting to change the Cabin Air Filter!

INSTRUCTIONS:*

1. Open Glove Box.
2. Disconnect glove box cable stop.
3. Work sides of glove box compartment to release the box and pull it forward away from dash.
4. Elevate the glove box to be horizontal with the floor. At this point you are able to pull the box forward releasing the door from the hinges. Be careful not to break the hinges.
5. You are now able to see the cabin air filter access panel.
6. Remove the access.
7. Replace the used cabin air filter with a new Pentius Cabin Air Filter, ensuring that the filter is placed with air flow markings in the correct direction if noted.
8. Replace all components in the reverse order of removal.

* Note that Cabin Air filter replacement instructions may be representative for certain vehicles.