

Part No. **PHB5388**



## Cabin Air Filter Installation Guide

- Cadillac Escalade (2002 )
- Chevrolet Avalanche (2002)
- Chevrolet Silverado 1500, 2500, 3500  
(1999 - 2002)  
Suburban, Tahoe (2000 - 2002 )  
GMC, Yukon (2000 - 2002)

FILTER PLACEMENT: **Under Dash**  
QTY : **2**

**Installation: (5 ~10 min.)**



Easy




Moderate



Difficult



Professional

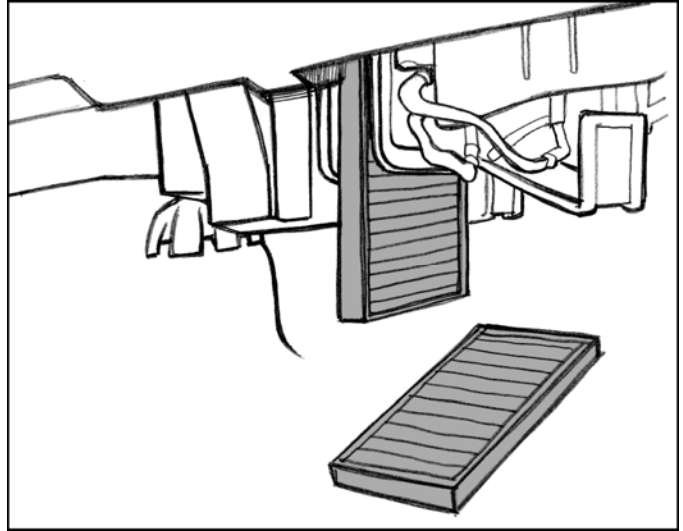

### CAUTION

Ensure ignition switch is OFF before attempting to change the Cabin Air Filter!

### INSTRUCTIONS:\*

1. Locate the knee bolster beneath the Glove box.
2. Remove the screws.
3. Locate the cabin air filter access panel within this area, unclip and move the arm to the side.
4. Remove the first filter, the second is directly behind the first and can be removed by sliding it towards you.
5. Install your new Pentius cabin air filters (2 req'd).
6. Replace all components in the reverse order of removal.

\* Note that Cabin Air filter replacement instructions may be representative for certain vehicles.