

Cabin Air Filter Installation Guide

- FORD Freestar V6 (04 - 05)
- Ford Windstar V6 (99 - 03)
- Mercury Monterey V6 (04 - 05)

FILTER PLACEMENT: **Engine Compartment**
QTY: **1**

Installation: (3 ~ 5 min.)



Easy




Moderate



Difficult



Professional

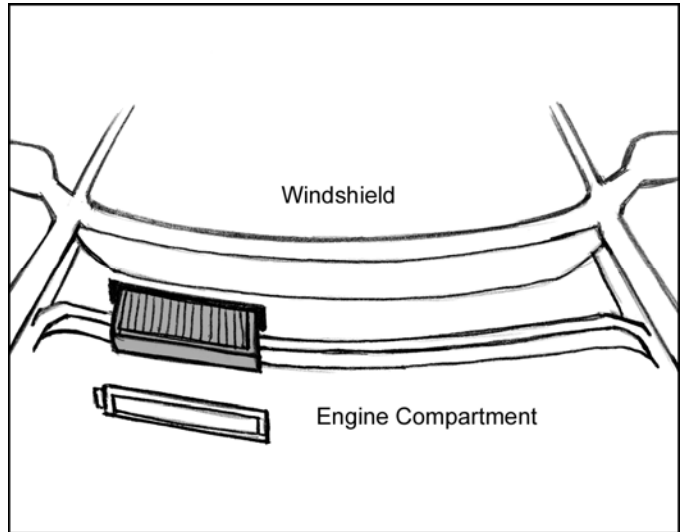

CAUTION

Ensure ignition switch is OFF before attempting to change the Cabin Air Filter!

INSTRUCTIONS:*

1. Open the hood and locate the cowl.
2. Pull back the weather-strip from the cowl vent screen
3. Open the cowl and locate the cabin air filter cover.
4. Remove and replace the used cabin air filter with a new Pentius Cabin Air Filter.
5. Verify that the air flow arrows are in the correct direction if noted on filter.
6. Replace all components in the reverse order of removal.

* Note that Cabin Air filter replacement instructions may be representative for certain vehicles.