

Part No. **PHB5676**



Cabin Air Filter Installation Guide

- Chevrolet Cobalt (2003 ~ 2006)
- Saturn ION (2003 ~ 2006)
ION Red Line (2003~2006)

FILTER PLACEMENT: **In Glove Box**
QTY: **1**

Installation: (5 ~ 10 min.)



Easy




Moderate



Difficult



Professional

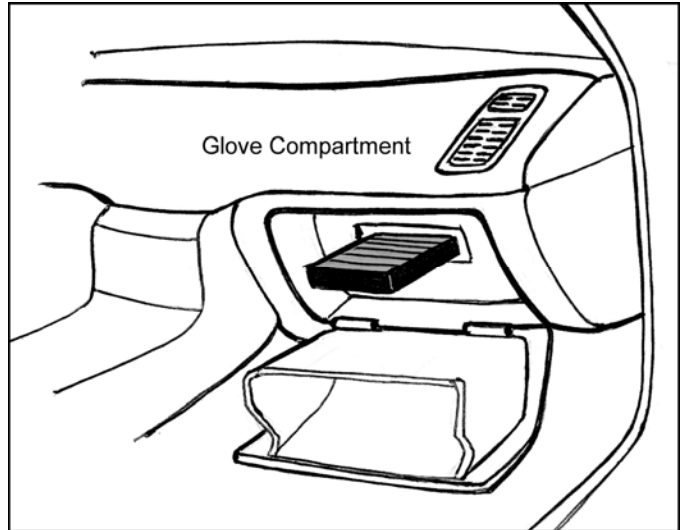

CAUTION

Ensure ignition switch is OFF before attempting to change the Cabin Air Filter!

INSTRUCTIONS:*

1. Open Glove Compartment.
2. Push in on right and left sides of glove compartment to release glove compartment.
3. Lift up on tab and flip down filter housing cover.
4. Remove and replace the used cabin air filter with a new Pentius Cabin Air Filter.
5. Verify that the air flow arrows are in the correct direction if noted on filter.
6. Replace all components in the reverse order of removal.

* Note that Cabin Air filter replacement instructions may be representative for certain vehicles.